

H-60 WIRING SYSTEM AWARENESS

PREVENTING WIRING SYSTEM FAILURE SAVES TIME, MONEY...


AND LIVES!



Silicone tape does not provide adequate chafe protection.



How much damage must be caused before clamps are replaced?

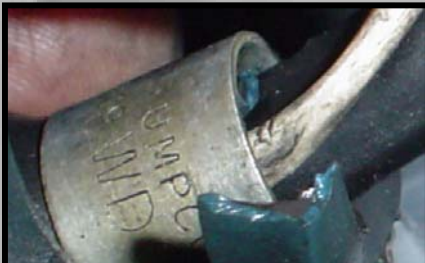

Deteriorated clamp chafing into unprotected wire.



Unused connectors require proper protection/stowage.



RF cable chafing fastener receptacle.

ALWAYS MAINTAIN THE CORRECT WIRING SYSTEM CONFIGURATION !